



Nacho Cheese Warmer/Chip Case instructions

Preparation: Install the cheese warmer in a level position. Connect the cord to a standard 110 outlet. Choose a location that will be easy for self-serving by your party guests.

1. Fill cheese warmer a quarter-full of warm water and turn knob to number 7.
2. Insert nacho cheese can and stir often to prevent burning. You can also empty the contents of the can into the stainless steel insert bowl that's provided.
3. Place chips in the chip holder
4. **DO NOT LEAVE CHEESE WARMER UNATTENDED. TURN OFF WHEN DONE TO PREVENT SCORCHING.**