



Cotton Candy Machine Operating Instructions

Preparation: Install the machine in a level position. Plug the machine into a standard 110 outlet. Loosen the screws on the top of the machine. Place the bowl on top of the unit.

1. There are two switches on the machine: heat and stir. Turn both switches to "ON".
2. We have set the heat to the proper position of "HIGH" and may have removed the switch to prevent the setting from being changed.
3. Fill the floss head with the floss sugar. If the unit is smoking, turn the knob counter clockwise to lower the temperature.
4. **DO NOT LET CHILDREN OPERATE THE MACHINE. DO NOT LEAVE IT UNATTENDED. KEEP FOREIGN OBJECTS OUT OF THE FLOSS HEAD. OPERATOR SHOULD NOT PUT HANDS OR FACE IN, OR DIRECTLY ABOVE, THE FLOSS HEAD.**